



ASSEMBLING INSTRUCTION

COMPONENTS


WILSON

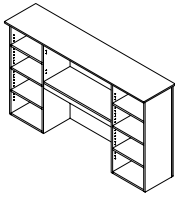

1672 & 1666 HUTCH BODY

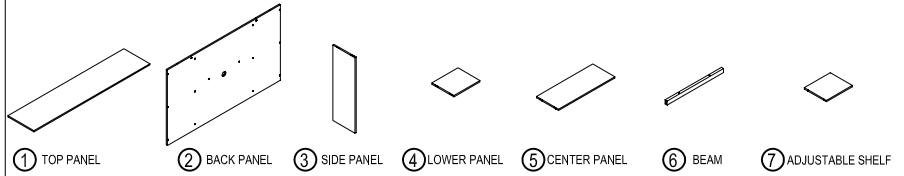

HARDWARE

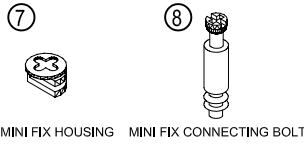

TOOL REQUIRED :
- PHILLIPS HEAD SCREW DRIVER AND FLAT HEAD SCREW DRIVER

STEP.1
Attach the mini fix connecting bolt into the nylon sockets provided in each panel.

STEP.2

STEP.3

STEP.4
Attach the lower panel to the side panel and tighten all the mini fix housings.

STEP.5
Attach the beam to the center panel and tighten all the mini fix housings.

STEP 6
Attach the left and right side panel to the configuration beam & center panel and tighten all the mini fix housings.

STEP 7
Attach the back panel to the configuration and tighten all the minifix housings.

STEP 8
Attach the adjustable shelf to the configuration.

STEP 9
Attach the top panel to the pre-assembled components and tighten all the mini fix housings.

