


ASSEMBLING INSTRUCTION



COMPONENTS

MARTIN® SERIES

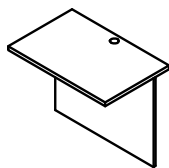


EXECUTIVE BRIDGE


FORMCASE®
FORMING A BETTER WORKPLACE
www.formcase.com

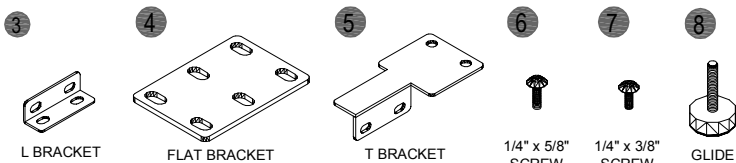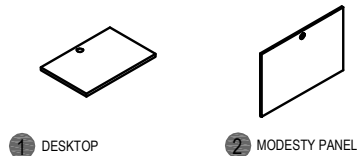


TOOL REQUIRED :
- PHILLIPS HEAD SCREW DRIVER AND FLAT HEAD SCREW DRIVER

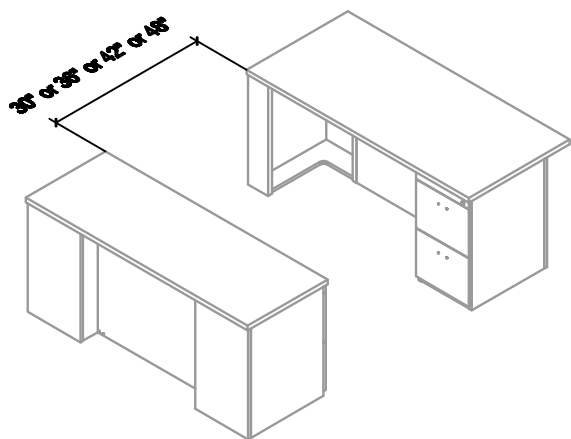


Step 1
a. Place main desktop and credenza at the final location, allowing a space that equals the length of the bridge.

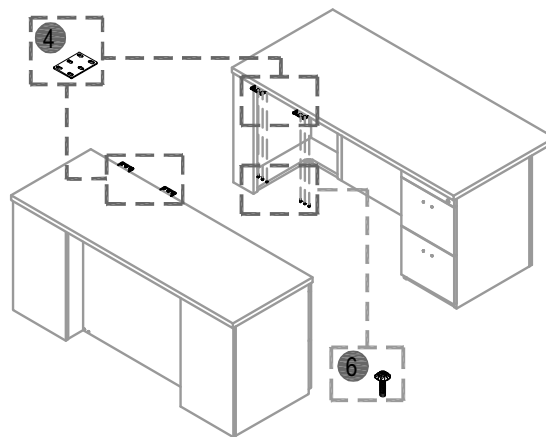


Step 2
a. Attach the flat plate to the main desktop and credenza top by using 1/4" x 5/8" screws.

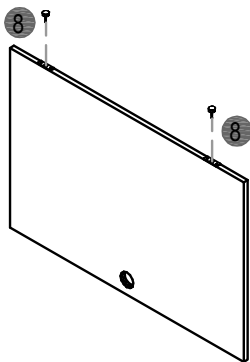


Step 3
a. Insert glides into modesty panel.
b. Position the modesty panel to the pre attached "T brackets"

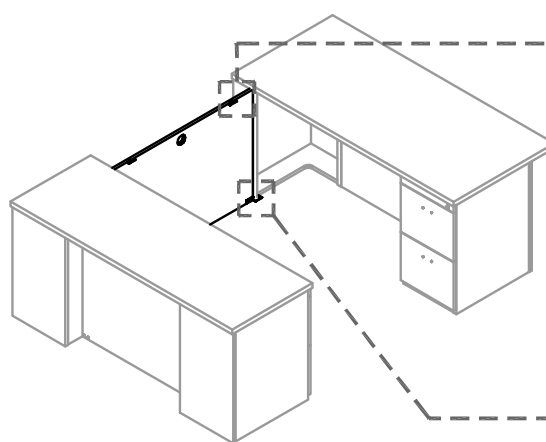


c. Attach the modesty panel to the "T bracket" by using 1/4" x 3/8" screws. (See detail 1)
d. Attach the "L bracket" to the modesty panel by using 1/4" x 3/8" screws. (See detail 2)

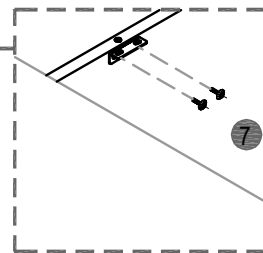


Detail 1

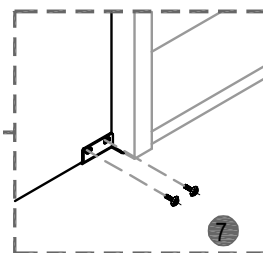


Detail 2

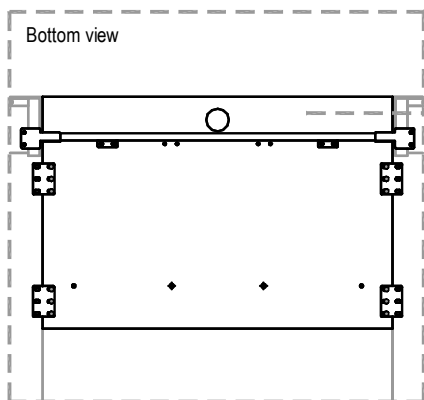


Detail 3

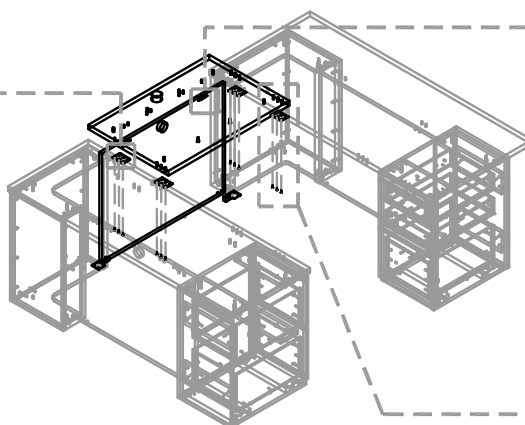

Step 4
a. Place the bridge top on the flat bracket. (See detail 3)
b. Attach L bracket to the bridge top by using 1/4" x 3/8" screws. (See detail 4)
c. Attach flat bracket to the bridge top by using 1/4" x 5/8" screws. (See detail 5)

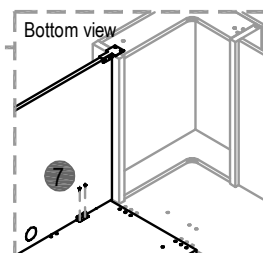

Detail 4

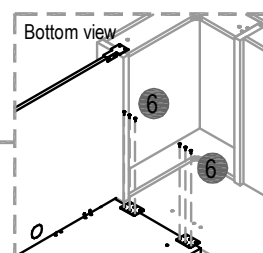

Detail 5